 
 


## CONTENTS



Catch Fencing (16 pcs.)



ARMCO Barriers (16 pcs.)



Tri-Power Pack  
22v, 12v, 9v (1 pc.)



Bridge Support, Low (13 pcs.)



Bridge Support, High (11 pcs.)



Controller (2 pcs.)

Tune-Up Kit: Track cleaning pad; Pick-up shoes; Springs



15" Straight Track (18 pcs.)



15" Terminal Track (1 pc.)



9" Straight Track (4 pcs.)



9" Squeeze Track (1 pc.)



9" Crossover Track (2 pcs.)



6" Straight Track (3 pcs.)



3" Straight Track (3 pc.)



15" Radius 1/8 Curve (1 pc.)



12" Radius 1/8 Curve (3 pcs.)



12" Radius Banked Curve (4 pcs.)



9" Radius 1/8 Curve (3 pcs.)




6" Radius 1/8 Curve (1 pcs.)



9" Radius 1/4 Curve (26 pcs.)



Mega G+ Formula Cars (2 pcs.)

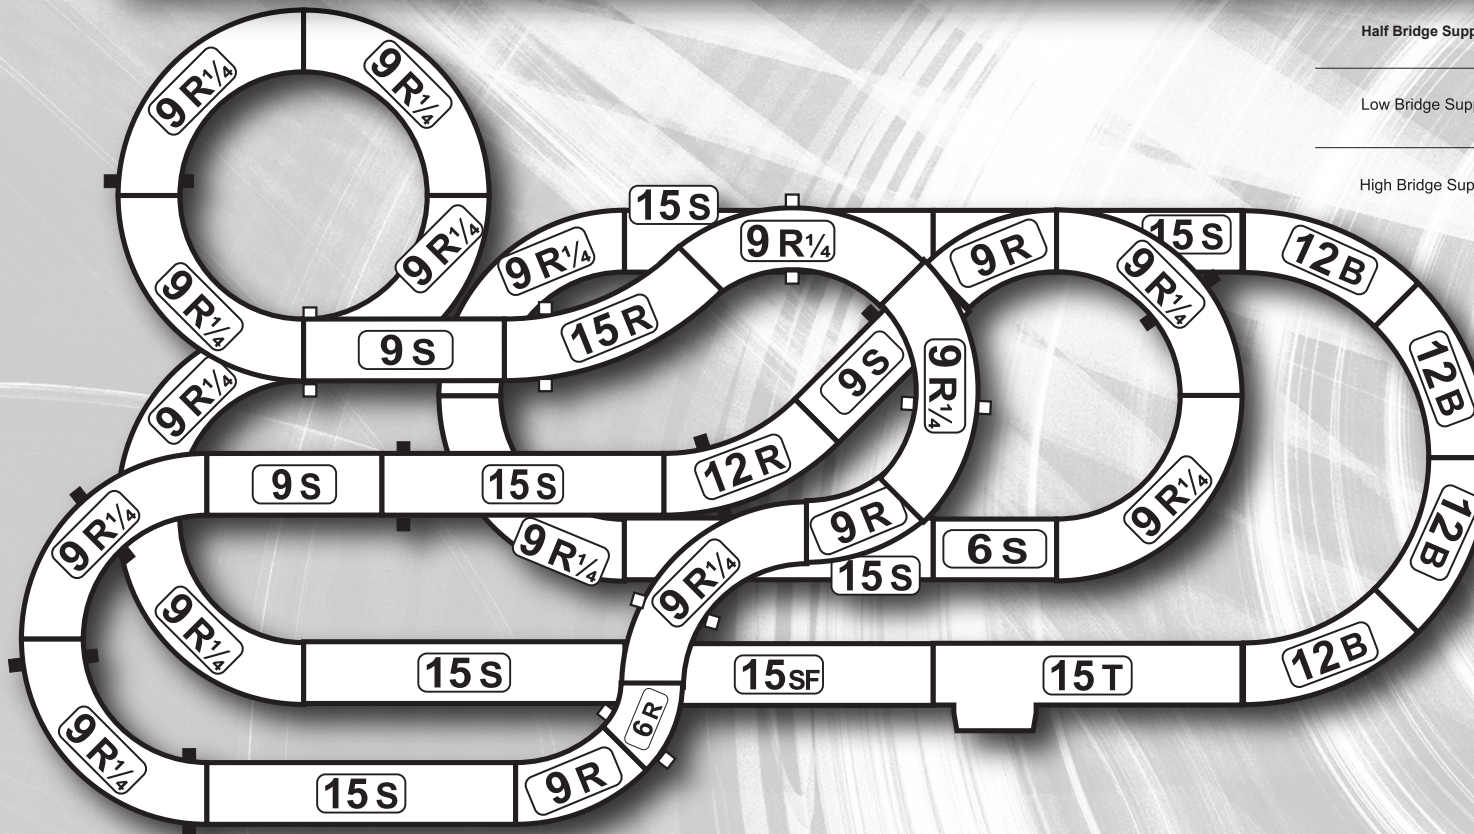

Half Bridge Support: ☐

Low Bridge Support: ☐

High Bridge Support: ☐

## HELP?

**AFXRACING.COM**

- FAQs
- Video Set-Up Tips
- Video Troubleshooting



orders@afxracing.com



877-866-9239



**AFXRACING.COM**

We will always respond to Email and phone calls quickly and in any case within 24 hours, not counting weekends and holidays.

**RACEMASTERS**





Copyright 2024 Racemasters, Inc.  
Manufactured by Racemasters, Inc.  
Distributed by Racemasters, Inc. Reno, NV 89506  
In Australia: AJ Leeman Hobbies Pty. Ltd.  
Unit 7/171 Bellvue Pde, Carlton, Sydney NSW 2218



**Getting Started** - Don't be surprised if your cars stop several times when you first use the track. Moisture in the air causes corrosion on the steel track rails and it takes a few laps of running to clean it off. So just give the car a push any time it stops and continue to drive. It will get better each lap and usually after 3 to 5 laps, the problem goes away completely. This can happen anytime the track is unused for many days.

## Round 2

Floor Space: 8' x 4'

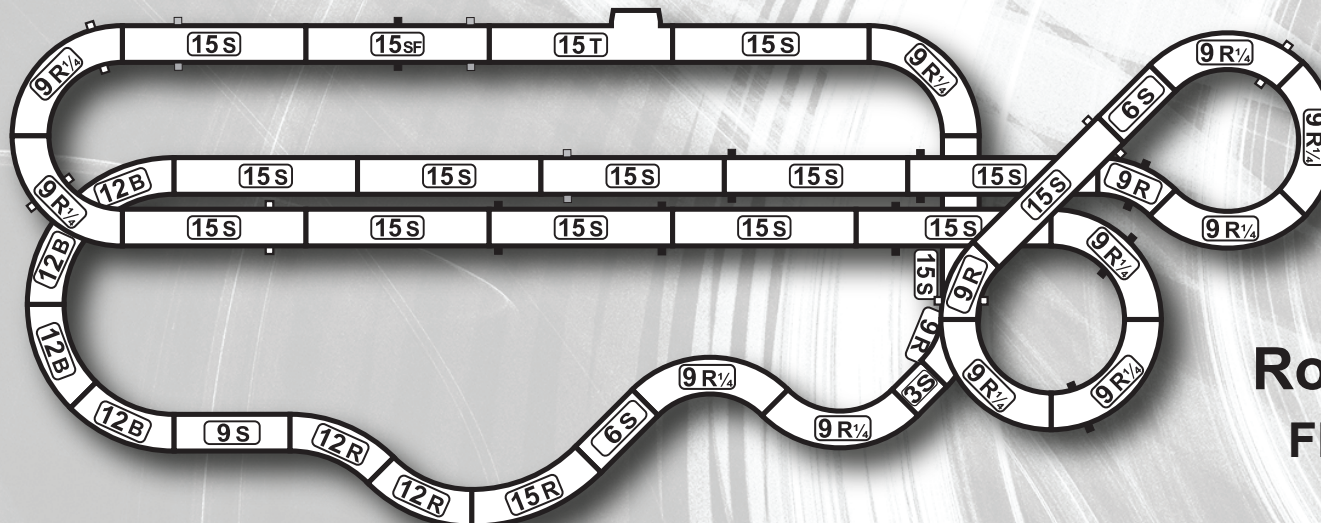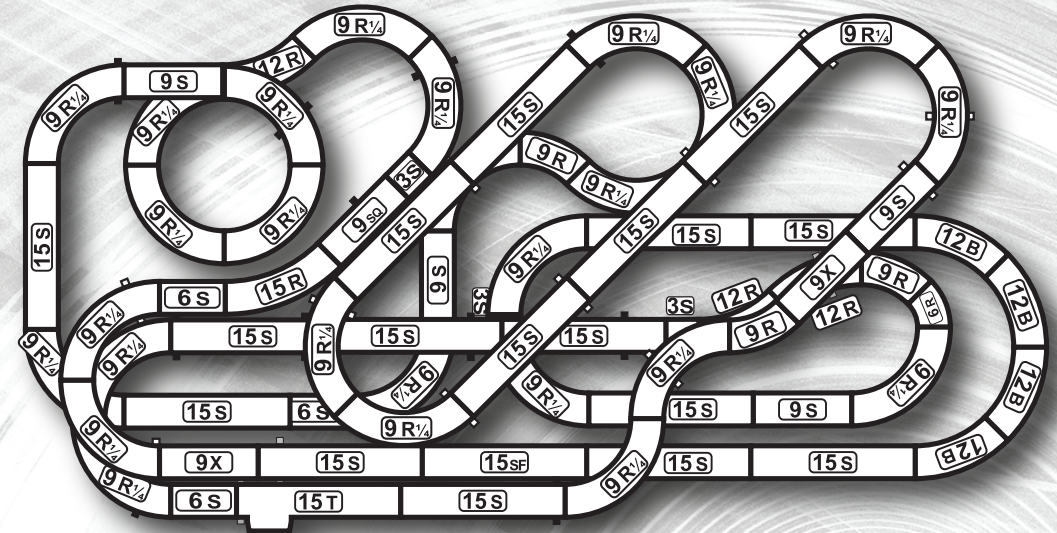


## Round 3

Floor Space: 9' x 3.5'



## Round 4

**Floor Space: 9' x 5'**

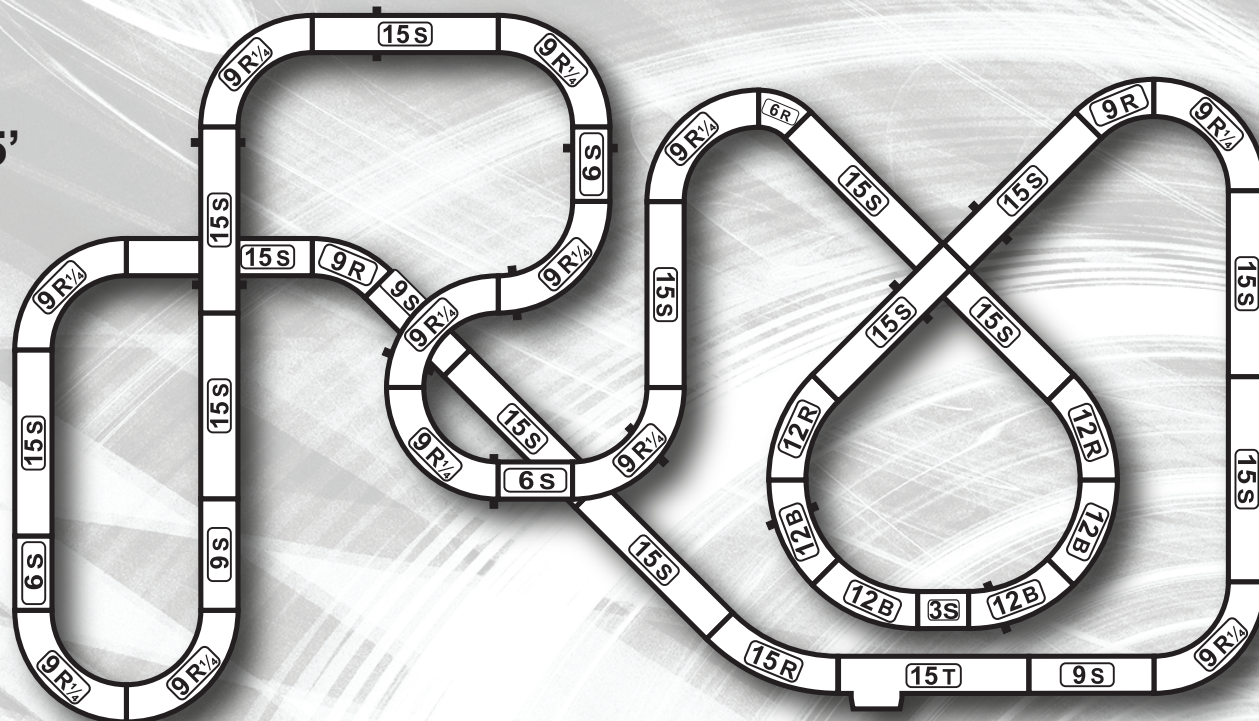

## Round 5

**Floor Space: 7.5' x 4'**

